

PosiGround™

Grounding Controller



MODEL 672-C MANUAL

**Programmable Version
for Software Revisions up to 5.02
Includes Horn Option**

Printed in Canada

CANADA
Garnet Instruments Ltd.
286 Kaska Road
Sherwood Park, AB T8A 4G7

USA
Garnet US Inc.
5360 Old Granbury Road
Granbury, TX 76049

GARNET

Liquid management solutions, your way.

garnetinstruments.com

1-800-617-7384

GARNET

PosiGROUND™

Grounding Controller

MODEL 672-C

Programmable Version - Software revision 5.02


Includes Horn Option


Table of Contents


CHAPTER 1 - FEATURES AND OPERATION	3
CHAPTER 2 - OPERATIONAL PROCEDURES	6
CHAPTER 3 - PROGRAMMING INSTRUCTIONS.....	8
CHAPTER 4 - INSTALLATION GUIDE.....	12
CHAPTER 5 - WIRING DIAGRAM	14
CHAPTER 6 - TROUBLESHOOTING GUIDE.....	15
CHAPTER 7 - SERVICE AND WARRANTY INFORMATION	16
MAIL IN WARRANTY	17

SAFETY SYMBOLS INFORMATION

"Notes", "Cautions", and "Warnings" have been used throughout this manual to bring special matters to the immediate attention of the reader.

 **NOTE:** expands on information for any procedures.


 **CAUTION:** explains safety information that could cause damage to the product, including data loss.

 **WARNING:** explains dangers that might result in personal injury or death.

CHAPTER 1 - FEATURES AND OPERATION

Congratulations on purchasing the Garnet Instruments Model 672-C PosiGround Truck Grounding Control System. The 672-C represents the state of the art in truck mounted grounding control systems, and will enhance safety in the handling of flammable products by providing a positive indication of proper grounding.

The PosiGround system consists of four main components: the controller mounted either inside or outside the cab of the truck, the PTO engagement or loading sensing switch, the grounding fault warning horn, and the ground connectors, which consists of the clamp module, a pair of ground cables, and a pair of ground clamps.

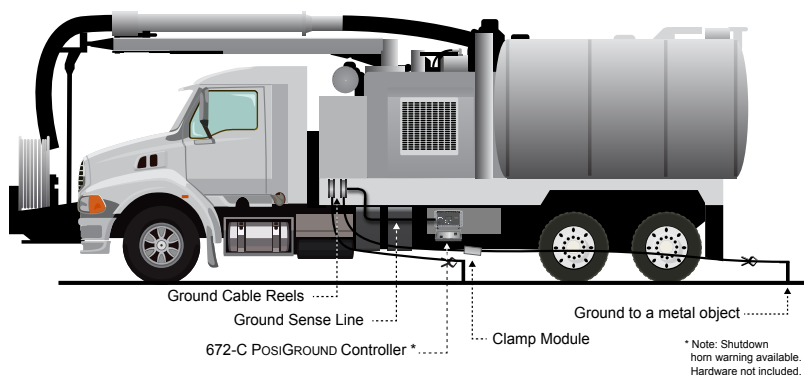


The controller is the “brains” of the system. It determines the operational status of the system and whether the ground clamps are properly connected, and controls the warning horn and the shutdown of the loading. The front panel of the controller has an LCD diagnostic display which allows the operator to determine whether the trailer is grounded, and also to assist in troubleshooting in the event of a system malfunction. The LCD has a light behind it to aid in night time viewing, this light operates from the 12 volt power on the truck. There are six wires coming from the controller: ground, ground sense, shutdown, warning horn, PTO sense, and 12 volt power for display illumination. The controller operates from a 3 volt Lithium cell which should give approximately 10 years of lifetime. The battery operation makes the grounding status display independent of truck power.

The controller continuously scans the ground and ground sense lines (the two ground cables with their clamps and the clamp module) to determine the ground status of the truck. There are six conditions that the controller scans for:

1. **Loading Disengaged:** If the PosiGround senses that the PTO (or other suitable loading signal) is disengaged, it displays "d" (**Disengaged**) on the right side of the display, indicating that loading is disengaged. The warning horn will be off, and the shutdown will be disabled so that the truck engine will be allowed to run. The left side of the display will show the grounding connection, as described below.
2. **Loading Engaged:** If the PosiGround senses that the PTO (or other suitable loading signal) is engaged, it displays "E" (**Engaged**) on the right side of the display, indicating that loading is engaged. It controls the horn and shutdown outputs in accordance with the grounding connection, as described below.
3. **Open Circuit:** If the controller determines that there is no electrical connection between the ground sense line and ground, indicating that the truck is not grounded, it displays "OP" (**OPen**) on the left side of the display. If loading is engaged, the horn will sound for a set time, and then loading will be shut down.
4. **Short Circuit:** If the controller determines that there is an electrical connection between the ground sense line and ground that does not go through the clamp module, indicating a short circuit between the grounding cables, it displays "SH" (**SHort**) on the left side of the display. If loading is engaged, the horn will sound for a set time, and then loading will be shut down.
5. **Reversed Clamp Module:** If the controller determines that there is an electrical connection between the ground sense line and ground, but that it is backwards, indicating that the clamp module is reversed or in the ground line, it displays "FL" (**FLipped**) on the left side of the display. If loading is engaged, the horn will sound for a set time, and then loading will be shut down.
6. **Proper Ground Connection:** If the controller determines that there is an electrical connection between the ground sense line and ground, and that it is in the proper direction, indicating that the truck is properly grounded, it displays "GO" (**GOod**) on the left side of the display. The horn will be off, and loading will be allowed.

The following image shows the front panel of the controller:

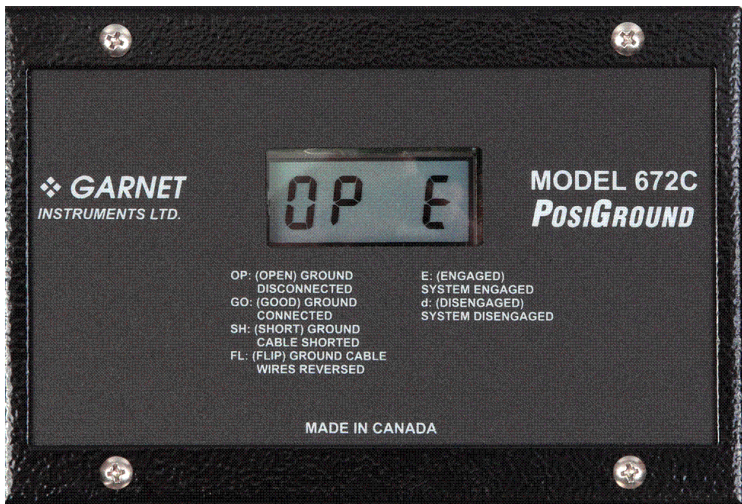


The controller can be programmed to accept a variety of inputs for the loading engagement sensor. See the programming section for details.

The clamp module is used to determine that the only electrical connection between the ground sense line and ground is through the sense line clamp. This ensures that a short circuit in the cabling prior to the clamps does not fool the system into thinking that the truck is grounded when in fact it may not be.

The cables and clamps are used to make the actual connections to ground. The proper procedure is to connect one clamp to a metal object which looks like it should be grounded, and to connect the other clamp to another metal object at least 20 feet away which also looks like it should be grounded. If they are both grounded, then there will be an electrical connection between them which the PosiGround will detect. If one or both of the objects is not grounded, then there should not be any connection between them, so the PosiGround will indicate that the truck is ungrounded. This ungrounded condition may result from connecting to pipes which have cathodic protection insulators at the flanges or from paint or gaskets insulating the metal pieces from each other.

 CHAPTER 2 - OPERATIONAL PROCEDURES

1. When the operator is ready to begin handling, loading, or unloading flammable material, the truck must be grounded.
2. Connect one clamp to a metal object which looks like it should be grounded, and connect the other clamp to another metal object at least 20 feet away which also looks like it should be grounded. Ideally, both objects should have a buried portion.
3. Check the display, it should show " d", indicating that the ground is good but that loading or unloading has not been started.
4. Loading or unloading can now be started. If loading is attempted before the ground connection is made, the horn will sound for a set time, and then loading will be shut down unless the ground connection is made within the set time period.
5. If the ground connection is lost during loading, the horn will sound for a set time, and then loading will be shut down unless the ground connection is remade within the set time period.
6. When loading is complete, shut down the loading system and then disconnect the grounds.
7. If the ground has been lost and the horn is sounding, shutting down the loading system will silence the horn.
8. If the PosiGround shows "SH" or "FL" when the cables are connected, then there is a defect in the wiring of the ground cables which must be corrected before the PosiGround can be used.
9. Each time a proper grounding connection is established, or the loading system is shut down, the timer is reset.
10. The PosiGround system must be tested periodically to make sure that the horn sounds and that loading shuts down. The system must also be tested by any new operator to ensure that he is familiar with PosiGround operation for that particular vehicle.

⚠ WARNING: The PosiGround is intended as an emergency backup system only, and is not intended as a substitute for operator diligence during the loading or unloading process.

⚠ WARNING: It is the operator's responsibility to properly connect the ground cables to ensure correct PosiGround operation. Simply hooking the ground clamps together and laying them on the ground does NOT constitute a proper ground connection.

⚠ WARNING: Do NOT travel with the ground clamps hooked together, or with the ground sense clamp connected to the truck frame. This may result in the operator forgetting to properly connect the ground clamps since no warning will be given when loading or unloading is started.

⚠ WARNING: It is the installer's responsibility to properly connect and test the horn and shut down features of the PosiGround. If these systems are not all connected, the truck operator MUST be made aware of exactly what the PosiGround does control, if anything.


IMPORTANT

In the unlikely event that the PosiGround system should fail and the truck is disabled due to engine shut down, the dash mounted PosiGround switch can be selected to **OVERRIDE** from the **NORMAL** position. This switch position completely disables the engine shutdown feature of the PosiGround system. All other features, such as the horn, may still be functional.

⚠ WARNING: When the PosiGround switch is in the **OVERRIDE** position, engine shutdown is disabled and grounding protection is eliminated.

CHAPTER 3 - PROGRAMMING INSTRUCTIONS

The PosiGround needs to have six options programmed for any particular application. There are 2 buttons on the back of the display panel which are used to set the options.

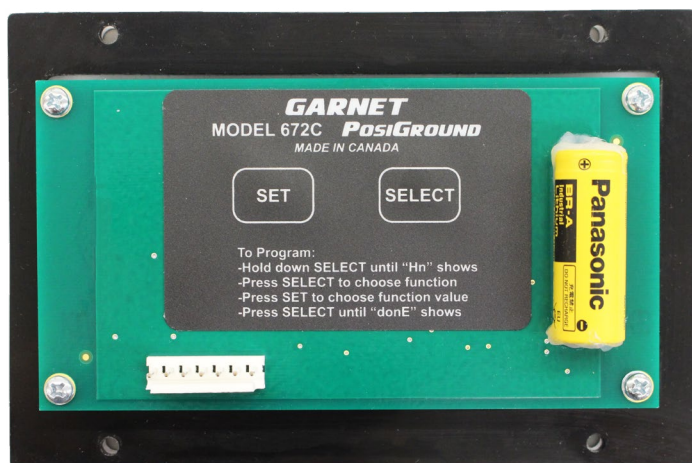

To program the time that the warning horn sounds before shutdown:

1. Hold down the **SELECT** button to enter the programming mode. Once the display shows "Hn40" (the 40 can be from 0 to 60) to show that you have entered the programming mode, release the button.
2. Press the **SET** button repeatedly to obtain the desired delay. The delay can be set in 2 second increments below 10 seconds, in 5 second increments from 10 to 30 seconds, and in 10 second increments from 30 to 60 seconds. When the delay has reached 60, pressing the **SET** button again returns the delay to 0.
3. Press the **SELECT** button repeatedly to scroll through the remaining programming options. After the last option, the display will show "donE" while the button is held down. When the button is released, the system will return to normal operation within a second. If at any time no button is pressed for 20 seconds, the system will return to normal operation. If you wish to remain in the programming mode, press the **SET** button while still holding down the **SELECT** button when the display shows "donE". This returns you to the first programming menu item.

To program the warning horn for steady or oscillating sound:

The horn warning can be set to sound steady or to turn on and off every second. The oscillating on and off sound is more attention getting, but some sounders already oscillate and should be provided with steady power.

1. Hold down the **SELECT** button to enter the programming mode. Once the display shows "Hn40" (the 40 can be from 0 to 60) to show that you have entered the programming mode, release the button.
2. Press the **SELECT** button again so the display shows "Hn5t" or "Hn0c".
3. Press the **SET** button to change the mode between steady "5t" and oscillating "0c".
4. Press the **SELECT** button repeatedly to scroll through the remaining programming options. After the last option, the display will show "donE" while the button is held down. When the button is released, the system will return to normal operation within a second. If at any time no button is pressed for 20 seconds, the system will return to normal operation. If you wish to remain in the programming mode, press the **SET** button while still holding down the **SELECT** button when the display shows "donE". This returns you to the first programming menu item.

To program the warning horn to turn off or stay on after the warning time has expired:

This feature is only available on software revisions 5.02 and higher.

The horn warning can be set to turn off after the warning time has expired, or to stay on and continue indefinitely.

1. Hold down the **SELECT** button to enter the programming mode. Once the display shows "Hn40" (the 40 can be from 0 to 60) to show that you have entered the programming mode, release the button.
2. Press the **SELECT** button again until the display shows "Hn0n" or "Hn0F".
3. Press the **SET** button to change the mode between staying on "Hn0n" and turning off "Hn0F".
4. Press the **SELECT** button repeatedly to scroll through the remaining programming options. After the last option, the display will show "donE" while the button is held down. When the button is released, the system will return to normal operation within a second. If at any time no button is pressed for 20 seconds, the system will return to normal operation. If you wish to remain in the programming mode, press the **SET** button while still holding down the **SELECT** button when the display shows "donE". This returns you to the first programming menu item.

To program the shutdown mode:

When ground is lost and the horn has timed out, the shutdown will be activated. The shutdown output can be programmed to go to an open or closed circuit when activated. Normally it would be programmed to go to an open circuit to shut down the equipment it is connected to.

1. Hold down the **SELECT** button to enter the programming mode. Once the display shows "Hn40" (the 40 can be from 0 to 60) to show that you have entered the programming mode, release the button.
2. Press the **SELECT** button again until the display shows "SdOP" or "SdCL".
3. Press the **SET** button to change the mode between open circuit "OP" and closed circuit "CL".
4. Press the **SELECT** button repeatedly to scroll through the remaining programming options. After the last option, the display will show "donE" while the button is held down. When the button is released, the system will return to normal operation within a second. If at any time no button is pressed for 20 seconds, the system will return to normal operation. If you wish to remain in the programming mode, press the **SET** button while still holding down the **SELECT** button when the display shows "donE". This returns you to the first programming menu item.

To program the engagement sensor pullup:

When the system is engaged, there will need to be some sort of signal to indicate this engagement. If the signal is just a switch connected to ground, with no light or any other connection to the switch, the pullup will need to be turned on in order to detect the switch. If the signal is a switch connected to 12 volts, or a voltage on a light bulb, then the pullup is not needed.

1. Hold down the **SELECT** button to enter the programming mode. Once the display shows "Hn40" (the 40 can be from 0 to 60) to show that you have entered the programming mode, release the button.
2. Press the **SELECT** button again until the display shows "PUon" or "PUoff".
3. Press the **SET** button to change the pullup between on "on" and off "off".
4. Press the **SELECT** button to scroll through the remaining programming option. After the last option, the display will show "donE" while the button is held down. When the button is released, the system will return to normal operation within a second. If at any time no button is pressed for 20 seconds, the system will return to normal operation. If you wish to remain in the programming mode, press the **SET** button while still holding down the **SELECT** button when the display shows "donE". This returns you to the first programming menu item.

To program the engagement sensor polarity:

When the system is engaged, there will need to be some sort of signal to indicate this engagement. If the signal is a ground to indicate engagement, then the polarity will need to be set to ground. If the signal is 12 volts to indicate engagement, then the polarity will need to be set to power.

1. Hold down the **SELECT** button to enter the programming mode. Once the display shows "Hn40" (the 40 can be from 0 to 60) to show that you have entered the programming mode, release the button.
2. Press the **SELECT** button again until the display shows "EnEn" or "EnPo".
3. Press the **SET** button to change the polarity between ground "En" and power "Po".
4. Press the **SELECT** button, the display will show "donE" while the button is held down. When the button is released, the system will return to normal operation within a second. If at any time no button is pressed for 20 seconds, the system will return to normal operation. If you wish to remain in the programming mode, press the **SET** button while still holding down the **SELECT** button when the display shows "donE". This returns you to the first programming menu item.

To check the software version:


To verify which revision of software the system is running, press the **SET** button during normal (not programming) operation. For as long as the **SET** button is held down, the display will show "r502" for example, indicating revision 5.02. If this feature does not work, the software version is 5.01.

Refer to the wiring diagram in section D during installation of the PosiGround system.

1. Pick a spot for the PosiGround controller box to be mounted. Do not mount the controller where it can be kicked, or where it will likely be struck by tools or equipment, or where it will be exposed to road wind and spray. It should be mounted where its face can be easily seen by the operator. The controller must not be mounted on a separate vehicle from the loading system that it is controlling, for example, if the PosiGround is shutting down a truck engine which drives a PTO pump, the controller must be mounted on the truck and not the trailer.
2. Install the wiring fittings into the enclosure and mount the display enclosure using the mounting flange holes.
3. If applicable to your installation, connect the pressure port of the pneumatic switch to the appropriate sensing point for loading control. Contact Garnet if you are unsure about how to sense when loading is activated.
4. If the truck does not have an existing ground cable and clamp, install one now. Mount a second cable for the ground sense line. This cable must be insulated.
5. Connect the clamp module between the end of the ground sense cable and the ground sense clamp. The RED wire from the module goes to the cable, and the BLACK wire from the module goes to the clamp.
6. The system can now be wired. Refer to the wiring diagram in Section D. Connect the controller black GROUND wire to ground, and the controller yellow GROUND SENSE wire to the ground sense cable.
7. Connect the controller red 12V DISPLAY LIGHT wire to a 12 volt source. This 12 volt source should be an ignition source so the truck battery is not drained when the truck is off.
8. If applicable to your installation, connect the controller orange HORN wire to an electrical warning horn. The controller completes a circuit to ground when the horn is to sound, so one side of the horn needs 12 volts provided to it, and the other side goes to the HORN wire.

9. Locate an electrical shutoff switch for the loading system. Break the connection to the switch and connect the two wire ends to the contact terminals (#30 and #87) of the auxiliary shut down (SD) relay (supplied). Connect one of the auxiliary SD relay coil terminals (#86) to a 12 volt ignition source, and the other coil terminal (#85) to the green SHUTDOWN wire from the PosiGround controller. It is a good idea to mount the auxiliary ESD relay close to the existing shutoff wiring to minimize any extra wire length in the shutoff circuit.
10. Connect the controller purple PTO loading sense wire as required.
11. Program the controller for the functions required, refer to the programming section for details.
12. If the PosiGround is set up to shut down the truck engine, connect the emergency bypass switch across the auxiliary SD relay terminals to allow emergency engine starting in the event of a failure of the PosiGround system. This switch should be located in a spot where it cannot be accidentally flipped. Be sure to install a label showing the switch position (this label is available from Garnet if needed).
13. Test the system for proper operation (see section B for operational procedures). If the loading system is shut down and the clamps are not connected, the PosiGround should show "OP d". Engaging the loading system at this point should show "OP E" and the horn should start sounding. After the set amount of warning time the horn should stop and the loading system should be shut down. Connecting the ground clamps together at this point should show "CL E" and the loading system should be allowed to start. If the controller shows "FL E" or "SH E" then the clamp module is not properly wired. **MAKE SURE** that the horn warning and shutdown systems work properly.
14. If either the shutdown or horn features are not connected, **MAKE SURE** that this is indicated in the owners manual and that the operator is aware of what the system does.

672 POSIGROUND WIRING DIAGRAM BODY TRUCK WITH MARKER AND STROBE LIGHTS

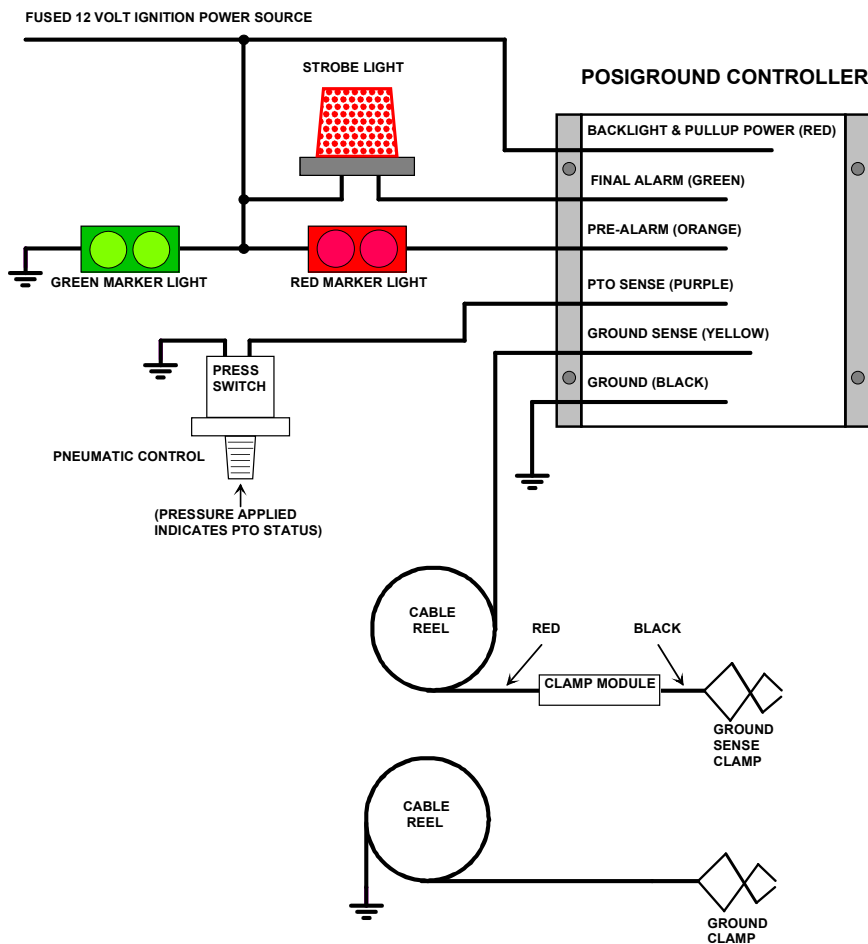

CHAPTER 6 - TROUBLESHOOTING GUIDE

There are only 3 serviceable components in the PosiGround system: the controller, the clamp module, and the pneumatic switch. Each part can be tested independently.

To test the pneumatic switch, disconnect the terminals and connect a continuity tester across the terminals. When there is no pressure to the switch, there should be continuity. Applying more than about 4 PSI of air pressure should cause the switch to open.

To test the clamp module, connect the red wire to the yellow ground sense wire of a PosiGround controller (one that you know is good), and the black wire to the black ground wire of the controller. The controller should show "CG", if not then the module is defective.

To test the controller, connect test lights between +12 volts and the horn and shutdown wires. Connect a known good clamp module (CM red to controller yellow, CM black to controller black). The display should read "CG E" and the shutdown light should be on and the horn light should be off. Note that it may take 1 to 2 seconds for the display to respond. Shorting the ground sense and ground wires together should show "SH E" and the shutdown light should stay on and the horn light should flash for a set time, and then both lights should go out. Shorting the shutdown and ground wires together should turn on the shutdown light, and the display should show "SH d". Removing this short should start the horn light flashing and the shutdown light should stay on for a set time. Remove the short between the ground sense and ground wires, the display should read "CG E" again. Removing the clamp module should show "CP E" and the shutdown light should stay on and the horn light should flash for a set time, and then both lights should go out.

If all components check out but problems are still encountered, check the wiring for faults by starting at the controller and working out from there.

CHAPTER 7 - SERVICE AND WARRANTY INFORMATION

The warranty will only apply only if the warranty card that is shipped with the equipment has been returned to Garnet Instruments Ltd.

DISCLAIMER OF WARRANTY ON HARDWARE

Garnet Instruments Ltd. warrants equipment manufactured by Garnet to be free from defects in material and workmanship under normal use and service for a period of one year from the date of sale from Garnet or an Authorized Dealer. The warranty period will start from the date of purchase or installation as indicated on the warranty card. Under these warranties, Garnet shall be responsible only for actual loss or damage suffered and then only to the extent of Garnet's invoiced price of the product. Garnet shall not be liable in any case for labor charges for indirect, special, or consequential damages. Garnet shall not be liable in any case for the removal and/or reinstallation of defective Garnet equipment. These warranties shall not apply to any defects or other damages to any Garnet equipment that has been altered or tampered with by anyone other than Garnet factory representatives. In all cases, Garnet will warrant only Garnet products which are being used for applications acceptable to Garnet and within the technical specifications of the particular product. In addition, Garnet will warrant only those products which have been installed and maintained according to Garnet factory specifications.

LIMITATION ON WARRANTIES

These warranties are the only warranties, expressed or implied, upon which products are sold by Garnet and Garnet makes no warranty of merchantability or fitness for any particular purpose in respect to the products sold. Garnet products or parts thereof assumed to be defective by the purchaser within the stipulated warranty period should be returned to the seller, local distributor, or directly to Garnet for evaluation and service. Whenever direct factory evaluation, service or replacement is necessary, the customer must first, by either letter or phone, obtain a Returned Material Authorization (RMA) from Garnet Instruments directly. No material may be returned to Garnet without an RMA number assigned to it or without proper factory authorization. Any returns must be returned freight prepaid to: Garnet Instruments Ltd, 286 Kaska Road, Sherwood Park, Alberta, T8A 4G7. Returned warranted items will be repaired or replaced at the discretion of Garnet Instruments. Any Garnet items under the Garnet Warranty Policy that are deemed irreparable by Garnet Instruments will be replaced at no charge or a credit will be issued for that item subject to the customer's request.

If you do have a warranty claim or if the equipment needs to be serviced, contact the installation dealer. If you do need to contact Garnet, we can be reached as follows:

CANADA

Garnet Instruments Ltd.
286 Kaska Road
Sherwood Park, AB T8A 4G7
CANADA
email: info@garnetinstruments.com

UNITED STATES

Garnet US Inc.
5360 Granbury Road
Granbury, TX 76049
USA
email: infous@garnetinstruments.com

TO MAXIMIZE YOUR WARRANTY PLEASE REGISTER ONLINE AT www.garnetinstruments.com OR MAIL THIS FORM IN TO GARNET.



LIMITED WARRANTY REGISTRATION

MODEL NO. _____ SERIAL NO. _____

SENDER BAR SERIAL NO. _____ (if applicable)

DATE PURCHASED _____ DATE INSTALLED _____
YR/MO/DAY YR/MO/DAY

IMPORTANT: WITHOUT THE SERIAL NUMBER OF EACH UNIT IT IS
DIFFICULT TO DETERMINE WARRANTY VALIDITY

COMPANY NAME _____

DEALERS NAME _____

PRINCIPAL CONTACT _____

WARRANTY CONTACT _____

ADDRESS _____

ADDRESS _____

TELEPHONE _____ FAX _____

TELEPHONE _____ FAX _____

IN CANADA RETURN TO:

Garnet Instruments Ltd.
286 Kaska Road
Sherwood Park, AB T8A 4G7
CANADA

IN UNITED STATES RETURN TO:

Garnet US Inc.
5360 Old Granbury Road
Granbury, TX 76049
USA

IMPORTANT: RETURNING THIS CARD WILL ENABLE US TO NOTIFY YOU IN THE EVENT OF A PRODUCT RECALL OR TO SUPPLY YOU WITH REQUIRED PRODUCT SAFETY INFORMATION.