Masport Pumper Scent ™ Operating Procedures

Mount after Oil Separation device (see **diagram A**).

■ INITIAL CHARGE

- 1 1/2" x 16" N.P.T. Pumper Scent™ Unit charge initially with 1/2 quart of Pumper Scent™ Oil.
- 1 1/2 " x 20" N.P.T. Pumper Scent™ Unit charge initally with 1 quart of Pumper Scent™ Oil.
- 2" N.P.T. Pumper Scent™ Unit charge initially with 1 quart of Pumper Scent™ Oil.
- 3" N.P.T. Pumper Scent™ Unit charge initially with 1 quart of Pumper Scent™ Oil.
- 4" N.P.T. Pumper Scent™ Unit charge initially with 2 quarts of Pumper Scent™ Oil.

■ RECHARGE

- 1 1/2" x 16" N.P.T. Pumper Scent™ Unit recharge with 8 ounces of Pumper Scent™ Oil.
- 1 1/2 " x 20" N.P.T. Pumper Scent™ Unit recharge with 1/2 quart of Pumper Scent™ Oil.
- 2" N.P.T. Pumper Scent™ Unit recharge with 1 quart of Pumper Scent™ Oil.
- 3" N.P.T. Pumper Scent™ Unit recharge with 1/2 quart of Pumper Scent™ Oil.
- 4" N.P.T. Pumper Scent™ Unit recharge with 2 quarts of Pumper Scent™ Oil.


Pour refill through 2" fill port located on top of the aluminum unit (see **diagram B**).

Note: To avoid over filling, only add Pumper Scent™ when foul odor re-appears.

DIAGRAM A:

PRESSURE RELIEF VALVES SCRUBBERISECONDARY VACUUM RELIEF VALVE VACUUM PRESSURE GAUGE SWING CHECKS VAPORIZER FILTER

DIAGRAM B:

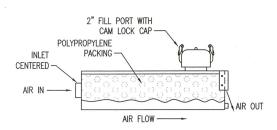

For any questions on operation or installation, call 1 (800) 228-4510.

Masport Inc.
6140 McCormick Drive
Lincoln, NE 68507
Tel. (402) 466-8428
Fax. (402) 466-8355
masport.sales@alltel.net

